


SERVICE Bulletin

February 1962 No. H14

- * NE CLASSEZ CE BULLETIN DE SERVICE MAIS PRENEZ NOTE DE SON CONTENU ET PORTEZ EN CONNAISSANCE A L'ATTENTION DE VOS REPRESENTANTS ET DE VOS INGENIEURS.
- * NO LO ARCHIVE, USELO. HAGALO CONOCER DE VENDEDORES Y MECANICOS.
- * ACHTUNG! DIESES MERKBLATT IST FUR DEN KUNDENDIENST UND FUR DIE VERKAUFER BESTIMMT UND NICHT FUR DEN AKTENSCHRANK.

ANCIENT HISTORY—B.J. ENGINE.

Although many thousands of B.J. Engines manufactured by Rotary Hoes Ltd., used on the Series II Gems, are still in service, the handbook is out of print and we frequently receive queries concerning service points. We are reproducing below a composite illustration showing this engine, complete with parts list.

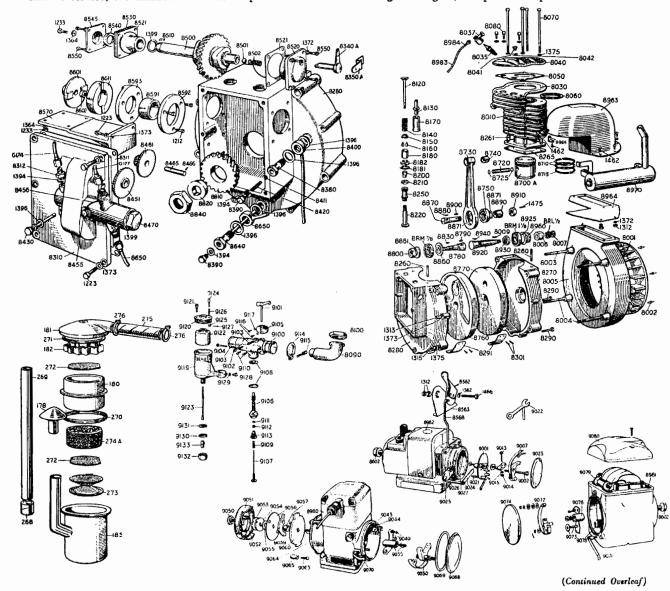

ROTARY HOES LTD. WEST HORNDON, ESSEX, ENGLAND.

Phone: HERONGATE 361 Cables: ROTAVATOR, BRENTWOOD

SERVICE BULLETIN No. H.14. continued

SERVICE NOTES ON B.J. ENGINE.

1. Valve Chamber.

The Valve Chamber of this engine is a separate casting and not part of the cylinder. If at any time the cylinder or the Valve Chamber are replaced, ensure that clearance exists between the outside of the port casting and the cylinder barrel fins. Insufficient clearance at this point results in distortion at the valve seats leading to leaking and burnt-out valves.

2. Pistons.

B.J. Engines were originally fitted with 3-ring pistons. Later engines were equipped with 4-ring pistons, but on delivery only 3 rings were fitted, 2 compression rings and one slotted oil control ring above the gudgeon pin. The fourth (lowest) ring groove was left emptythe purpose being to ensure ample lubrication to the top rings during the early part of the engine life. Later when oil consumption increased, a slotted oil control ring could be fitted to give a greater degree of oil control.

Correct Piston clearance in the cylinder bore is 0.007" ---0.008".

3. Camshaft (8500) and Timing Gear (8810).

Early B.J. Engines were fitted with Camshaft and Timing gears of hardened steel. Later engines had hardened steel camshafts and Manganese Bronze Timing Gears.

In the later type, the Bronze Timing Gear was 0.020" larger on its outer Diameter and in some cases may foul the timing box casting if fitted to an early type engine, which will necessitate removal of excess material to obtain clearance. Because of the 0.020" difference in the gear size, camshafts and timing gears are only supplied in matched pairs.

4. Valve Timing.

Valves are timed to give equal overlap at T.D.C., i.e., Inlet Valve opens 10°—12½° before T.D.C., exhaust valve closes 10°—12½° after T.D.C. Set tappets at 0.012" clearance to time valves, then reset inlet tappet at 0.006" and exhaust tappet at 0.008" after timing.

Note There is a 0.010" quietening ramp on each cam, consequently the running clearance must be set on the consequently the running clearance must be set on the "dwell" of the cam. (that part of the cam which does not lift the valve at all).

5. Ignition Timing.

Bring the Piston to T.D.C. with both valves closed. Then turn the engine anti-clockwise until piston is $\frac{3}{8}$ " before T.D.C. With the three magneto coupling setscrews slackened and the taper free, turn the magneto in the direction of normal rotation with the impulse starter tripped until the contact breaker points are just breaking. Secure coupling and recheck timing.

PARTS LIST

Part	Baradatlan	No. off	Part No.	Description	No. off
No.	Description			•	011
BJ.8001	Flywheel	1	S.1373	Crankcase Flanging Stud Spring Washer,	0
BJ.8002	Flywheel Clutch Pin	6		5/16" dia.	8
BJ.8003	Flywheel Housing Stud—Short	2 2	BJ.8291	Crankcase Splash Plate	2 4
BJ.8004	Flywheel Housing Stud-Long	2	BJ.8301	Crankcase Splash Plate Rivet	4
S.1315	Flywheel Housing Stud Nut, 7/16" BSW.	″ J:- 1	BJ.8700A		2
S.1375	Flywheel Housing Stud Spring Washer 7/16	dia. 4	87.8710	Piston Ring—compression	2
BJ.8005 BJ.8006	Fywheel Housing	i	BJ.8715 BJ.87 2 0	Piston Ring-oil control	- ;
	Flywheel Nut	i	BJ.8725	Gudgeon Pin	ź
BRL.1/2 BJ.8007	Flywheel Nut Ballbearing Flywheel Nut Ballbearing Retaining Plate	i	BJ.0720	Gudgeon Pin Circlip Connecting Rod	1
BJ.8007	Flywheel Key	i		Connecting Rod Top End Bush	i
	Cylinder	i		Connecting Rod Bottom End Bearing	i
BJ.8030	Valve Chamber	1		Flywheel Timing Side	i
BJ.8031	Valve Chamber Insert As	required	BJ.8770	Flywheel Drive Side	i
BJ.8035	Spark Plug-KLG.18mm, corundite	1		Crankshaft Timing Side	1
BJ.8037	Spark Plug Terminal Cover	1	BJ.8790	Crankshaft Timing Side Key	1
	Cylinder Head	1		Crankshaft Timing Side Nut	1
BJ.8041	Inspection Plug	1	BJ.8830	Crankshaft Timing Gear Bush Key	1
BJ.8042	Inspection Plug Copper Asbestos Washer	1	BRM.7/8	Crankshaft Timing Side Ballbearing	1
BJ.8050	Cylinder Head Gasket	1	BJ.8860	Crankshaft Timing Side Oilseal Disc—Large	1
	Valve Chamber Gasket	!		and .	
BJ.8070	Cylinder Head Holding Down Stud-Long	4	BJ.8861	Crankshaft Timing Side Oilseal Disc—Small	1
	Cylinder Head Bolt-Short	. 3		(superseded by BJ.8786, 8787, 8785)	
S.1375	Cylinder Head Bolt Spring Washer, 7/16"	dia. 7	BJ.8786	Crankshaft Timing Side Oilseal Disc-Large	1
BJ.8120	Valve	2	BJ.8787	Crankshaft Timing Side Oilseal Disc-Small	1
	Valve Guide	2	BJ.8785	Crankshaft Timing Side Shim	!
	Valve Spring	2 2	BJ.8870	Crankpin	1
	Valve Spring Cup	2 pair	BJ.8871	Crankpin Shim	2
BJ.8160	Valve Spring Collet	2 pan	BJ.8880		!
	Valve Spring Upper Cover	5	BJ.8890	Crankpin Flywheel Bush	!
BJ.8181	Valve Spring Bottom Cover Valve Spring Bottom Cover Lock Nut	5	BJ.8900	Crankpin Flywheel Bush Key	!
BJ.8182	Valve Spring Bottom Cover Centering Ring	2	BJ.8910		1
BJ.8200	Tappet Cap	2 2 2 2 2 2 2 2 2 4	S.1475	Crankpin Locking Screw ¼" BSW. × ¾" long,	
BJ.8210	Tappet Cap Lock Nut	<u>-</u>		Grub Screw	I
BJ.8220	Tappet	2	BJ.8920		!
BJ.8250	Tappet Guide	2		Crankshaft Drive Side Nut	. 1
BJ.8260		4			quired
	Cylinder Base Stud Nut	4		Crankshaft Drive Side Key	1
	Cylinder Base Gasket	1		/8 Crankshaft Drive Side Ballbearing	1
	Crankcase Drive Side	1	87.8960	Crankshaft Drive Side Oilseal,	1
BJ.8280		1	01.0063	Weston 200.112.50)
BJ.8290	Crankcase Flanging Stud	4		Cooling Blast Shroud	1
5.1313	Crankcase Flanging Stud Nut, 5/16" BSW.	8	BJ.8964	Cooling Blast Shroud Base Plate	1

SERVICE BULLETIN No. H.14. continued

Part No.	Description	No.	Part		No.
S.1462	Description Cooling Blast Shroud Base Plate Screw,	off	No. 5.1396	Description Crankers Oil Sustian Bady Fibra Western	off
S.1312	4" BSW. × 3" Rd. Head Cooling Blast Shroud Base Plate Screw Nut,	6	BJ.8650	Crankcase Oil Suction Body Fibre Washer, 17/32" i.d. × 3" o.d. × 1/16"	2
S.1372	4" BSW. Cooling Blast Shroud Base Plate Screw	2	BJ.8810	Crankcase Oil Suction Pipe Crankshaft Timing Gear	1
	Spring Washer, 🕍 dia.	6	BJ.8820 BJ.8840	Crankshaft Timing Gear Bush Crankshaft Timing Gear Bush Nut	1
BJ.8965 S.1462	Clip for Shroud Clip to Shroud and Cylinder Set Screw,	1	S.1233	Magneto Holding Down Setscrew, * BSW. X * long, Hex. Head	2
5.1372	¼" BSW. × ½" long, Rd. Head Clip Set Screw Spring Washer, ¼" dia.	2	S.1364	Magneto Holding Down Setscrew Washer	
BJ.8970 BJ.8983	Exhaust Muffler	į	G.178	3" dia. Air Cleaner Inlet Pipe Cap	2 1
BJ.8984	Magneto Lead Magneto Lead Terminal Spade	i	G.180 G.181	Air Cleaner Gauze Container Air Cleaner Cover]]
BJ.8310 BJ.8311	Timing Cover and Oil Pump Body Timing Cover and Oil Pump Body Casket]]	G.182 G.185	Air Cleaner Container Clip Air Cleaner Tank	į
S.1223	Timing Cover and Oil Pump Body Setscrew, 5/16" BSW. X & long, Hex. Head		BJ.8090	Induction Pipe	į
S.1373	Timing Cover and Oil Pump Body Spring Washe	5 er, _	BJ.8100 G.268	Induction Pipe Nut Air Cleaner Extension Tube Hose Connection	1
BJ.8312	5/16" dia. Oil Pump Union	5 3	G.269 G.270	Air Cleaner Extension Tube Air Cleaner Tank Gasket	1
\$.1394	Oil Pump Union Washer, 3" i.d. × 3" o.d. × 1/16" Fibre	3	G.271	Air Cleaner Cover Gasket	į
BJ.8340A	Exhaust Valve Lifting Spindle]	G.272 G.273	Air Cleaner Perforated Plate Air Cleaner Perforated Base Cone	2 1
BJ.8350A	Exhaust Valve Lifting Spindle Clip Breather Body	1	G.274A G.275	Air Cleaner Filter Air Cleaner Cover to Carburettor Hose	1 1
BJ.8390 \$.1394	Breather Body Plug Breather Body Plug Fibre Washer, &" i.d. × &"	2	G.276	Air Cleaner Cover to Carburettor Hose Clip	ż
	o.d. × 1/16"	1		PARTS OF 'AMAL' CARBURETTOR	
BJ.8400	Breather Tube Breather Ring Washer, Sealing Washer Wipac	1	BJ.8098	(not manufactured by Rotary Hoes) Carburettor Complete	,
BJ.8411	No. 03178 Breather Ball Valve	2 1	BJ.9100	Carburettor Body	į
BJ.8420	Breather Ball Valve Spring Crankshaft Oil Feed Screw	į	BJ.9101 BJ.910 2	Throttle Lever Spindle and Stop Stop Screw	1
S.1396	Crankshaft Oil Feed Screw Fibre Washer,		BJ.9103 BJ.9104	Stop Screw and Air Adjusting Screw Spring Air Adjusting Screw	2
BJ.8450	17/32" i.d. × 7/8" o.d. × 1/16" Oil Pump Plunger	1	BJ.9105	Throttle Valve	į
BJ.8451	Oil Pump Drive Gear Oil Pump Plunger Fulcrum Screw	1	BJ.9106 BJ.9107	Adjustable Main Jet Body Needle for Adjustable Main Jet	i
BJ.8456	Oil Pump Plunger Fulcrum Screw Locking Wire	i į	BJ.9108 BJ.9109	Washer for Float Chamber Spring for Needle	2 1
BJ.8461 BJ.8465	Oil Pump Drive Intermediate Gear Oil Pump Drive Intermediate Spindle	1	BJ.9110 BJ.9111	Plug Screw for Mixing Chamber Gland Washer	2
BJ.8466	Oil Pump Drive Intermediate Spindle Taper Pin Oil Pump Body Plug	1	BJ.9112	Cork Gland	į
S.1399	Oil Pump Body Plug Fibre Washer,	,	BJ.9113 BJ.9114	Gland Adjusting Screw Outlet Clip	1
	$\frac{1}{4}$ " i.d.x. \times 1 $\frac{1}{4}$ " o.d.x. \times 1/16" Camshaft	i	BJ.9115 BJ.9116	Outlet Clip Pin Throttle Valve Screw	1 2
	Camshaft Thrust Ball Camshaft Thrust Ball Spring	1	BJ.9117	Throttle Valve Screw Lock Washer	2
S.1399	Camshaft Thrust Fibre Washer,	1	BJ.9118 BJ.9119	Float Chamber Complete Float Chamber only	1
S.1364	¾" i.d. × 1¼" o.d. × 1/16" Camshaft Setscrew Flat Washer, ¾" dia.	į	BJ.9120 BJ.9121	Float Chamber Cover Cover Lock Screw	1
BJ.8510 S.1233	Camshaft Key Camshaft Setscrew, 3" BSW. × 3" long,	1	BJ.9122 BJ.9123	Float	į
BJ.8520	Hex. Head Camshaft Bearing—Exhaust Lift Side	1 1	BJ.9124	Needle Tickler	i
BJ.8521	Camshaft Bearing Gasket	2	BJ.9125 BJ.9126	Tickler Stop Tickler Spring	1
BJ.8530	Camshaft Bearing (Magneto Side) (Superseded by BJ.8531, 8532, 8533)	1	BJ.9127 BJ.9128	Tickler Cotter Plug Screw	1
BJ.8531 BJ.8532	Camshaft Bearing (Magneto Side) Camshaft Bearing Thrust Cap	1	BJ.9129	Plug Screw Washer	į
BJ.8533	Camshaft Bearing Thrust Cap Plug	1	BJ.9130 BJ.9131	Needle Seat Lock Nut Needle Seat Lock Washer	1
BJ.8550	Camshaft Oilseal, Weston 150.075.40 Camshaft Bearing Set Screw	8	BJ.9132 BJ.9133	Petrol Union Nut (part of G.173) Petrol Union Nipple (part of G.173)	1
BJ.8545 S.1 3 72	Camshaft Oilseal Holder Camshaft Bearing Spring Washer, ½" dia.	1 8	53.7133		'
BJ.8570	Magneto Platform	Ĭ	BJ.8562	B.T.H. MAGNETO Magneto Hand Control Lever	1
5.1225	Magneto Platform Fixing Screw, 5/16" BSW. X 3 long	4	S.1466	Magneto Hand Control Lever Setscrew	į
S.1373	Magneto Platform Fixing Screw Spring Washer, 5/16" dia.	4	S.1312 S.1382	Magneto Hand Control Lever Setscrew Nut Magneto Hand Control Lever Setscrew	2
BJ.8591 BJ.8592	Magneto Coupling Body Camshaft Half Magneto Coupling Flange Locking Plate	1	BJ.8563	Thackeray Washer Magneto Hand Control Lever Setscrew Bracket	1
BJ.8593	Magneto Coupling Flange Drive Plate	i	BJ.8568	Magneto Hand Control Connecting Link	i
5.1212	Magneto Coupling Flange Locking Plate Set Screw, 1" BSW. X 1" long, Hex. Head	3		PARTS OF 'B.T.H.' MAGNETO	
BJ.8601 BJ.8602	Magneto Flange (BTH, and Lucas) Magneto Flange Nut (BTH, and Lucas)	1	BJ.898 2	(not manufactured by Rotary Hoes) B.T.H. Magneto complete with Driving Flange,	
BJ.8611	Magneto Laminated Coupling	į	BJ.9000	Advance and Retard Lever, etc.	1
₿ Ј.8 640	Crankcase Oil Suction Body	'	B7.9000	Contact Breaker complete assembly	i

SERVICE BULLETIN No. H.14. continued

Part No.	Description	No. off	Part No.	Description	No. off
BJ.9001	Base and Pivot Arm assembly	1	BJ.9055	Drive Flange Spacing Washer	1
BJ.9002	Screw Fixing Contact Breaker to Armature	1	BJ.9056	Drive Spring Retainer	1
BJ.9007	Lever and Spring assembly	1	BJ.9057	Driver Flange Spacer	1
BJ.9013	Contact Screw—Adjustable	1	BJ.9059	Trip Arm	1
BJ.9014]	BJ.9060	Driven Flange Group	1
	Lock Washer—for item BJ.9014	1	BJ.9061	End Plate Screw	4
BJ.9021	Bush Spring assembly	!	BJ.9062		4
BJ.9022	Spanner and Gauge	ļ	BJ.9063	Impulse Stop Screw	1
BJ.9023		!	BJ.9064		!
	Pillar and Spring assembly	! 1	BJ.9065	Impulse Stop	!
BJ.9025	Timing Lever complete with Clamping Screw	;	BJ.9066	Impulse Stop Screw Lock Washer	1
BJ.9020	Cover Tube for Cam Ring	1	BJ.9067 BJ.9068		,
63.9027	Cam Ring and Screw	'	BJ.9068		1
	PARTS OF 'WICO' MAGNETO		BJ.9070	Breaker Box Cover Clip assembly	2
	(not manufactured by Rotary Hoes)		03.9070	breaker box cover crip assembly	2
BJ.8980	Wico Magneto complete with Driving Flange and H.T. Lead	1		PARTS OF 'LUCAS' MAGNETO (not manufactured by Rotary Hoes)	
BJ.9030		i	BJ.8981	Lucas Magneto complete with Driving Flange	
	Cam assembly	i		and H.T. Lead	1
BJ.9040		1	BJ.9071	Contact Breaker Cover Spring Clip	1
BJ.9043	Condenser assembly	1		Contact Breaker Arm assembly	1
BJ.9044	Condenser assembly Setscrew	2		Contact Point assembly	1
BJ.9050	Impulse Locknut	1	BJ.9074		1
BJ.9051]	BJ.9076		!
BJ.9052		!	BJ.9078		ļ
BJ.9053		!	BJ.9079		!
BJ.9054	Drive Cup Spacing Washer—Steel	ı	BJ.9080	Condenser Cover assembly	ı

^{*} DO NOT FILE, USE THIS. BRING IT TO THE ATTENTION OF YOUR SALES AND SERVICE ENGINEERS.